

For USA only:  
This product contains a CR Coin Lithium Battery which contains Perchlorate Material – special handling may apply. California residents.  
See www.dtsc.ca.gov/hazardouswaste/perchlorate/

WARNING – FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## SHARP CORPORATION

PRINTED IN CHINA / IMPRESO EN CHINA  
09DT(TINSZ1509EHZZ)

## OPERATIONAL NOTES

To insure trouble-free operation of your SHARP calculator, we recommend the following:

- 1. The calculator should be kept in areas free from extreme temperature changes, moisture, and dust.
- 2. A soft, dry cloth should be used to clean the calculator. Do not use solvents or a wet cloth.
- 3. Since this product is not waterproof, do not use it or store it where fluids, for example water, can splash onto it. Raindrops, water spray, juice, coffee, steam, perspiration, etc. will also cause malfunction.
- 4. If service should be required, use only a SHARP servicing dealer, a SHARP approved service facility or SHARP repair service.
- 5. Do not operate the unit with the battery insulation sheet attached. The battery insulation sheet prevents the memory protection battery from wearing, and is found on the back of the unit.
- Operating with the battery insulation sheet attached may result to loss of information such as date and time, conversion rate, and tax/discount rate if the AC power plug is accidentally pulled out from the wall socket.
- 6. Do not wind the AC cord around the body or otherwise forcibly bend or twist it.
- 7. Unplug the calculator by pulling on the plug portion, not the cord.
- 8. Do not place objects on the AC cord. Do not run the AC cord under rugs, mats, or other such objects.

SHARP will not be liable nor responsible for any incidental or consequential economic or property damage caused by misuse and/or malfunctions of this product and its peripherals, unless such liability is acknowledged by law.

## USING THE CALCULATOR FOR THE FIRST TIME

First, pull out the insulation sheet for the memory protection battery (installed for retaining the date/time, conversion rate, and tax/discount rate information). Reset the calculator to initialize the unit's state, then adjust the date and time.

## Removing the insulation sheet, and resetting

1. Pull out the insulation sheet for the memory protection battery.
2. Press the RESET switch located on the back of the unit. (See "RESETTING THE UNIT".)  
\* The clock starts, indicating the current date and time as January 1, 2005, 12:00 a.m.

## Adjusting date and time

Example: When the date is September 15, 2010, and the time is 3:38 p.m.

Operation Operación	Display Visualización
GT RATE 9 . 15 . 2010 15 . 38 00 P [Reset]	9-15-2010 3:38:00 P 0.

## OPERATING CONTROLS

- OFF + P PIC  
ON  
POWER SWITCH; PRINT / ITEM COUNT MODE SELECTOR:  
"OFF": Power off.  
"ON": Power ON. Set to the non-print mode.  
"P+PIC": Power ON. Set to the print mode.  
"P+IC": Power ON. Set to the print and item count mode.  
1) The counter will count the number of times that the **[M]** key has been pressed in addition:  
• Each time the **[ - ]** key is used in subtraction, 1 will be subtracted from the count.  
• The count is printed when the calculated result is obtained.  
• Pressing of the **[x]**, **[x]**, **[ - ]**, **[AVG]** or **[MU]** key clears the counter.  
2) When the grand total/rate setting mode selector is in the ON position (GT), the counter will count the number of times that the calculation results have been stored in the grand total memory. To print and clear the count, press the **[GT]** key.  
3) The memory item counter will count the number of times that the **[M]** key has been pressed in the addition.  
Note: • Each time the **[M]** key is used in the subtraction, 1 will be subtracted from the count.  
• The count is printed when the memory is recalled.  
• Pressing of the **[M]** key clears the counter.  
Note: The counter has a maximum capacity of 3 digits (up to ±999). If the count exceeds the maximum, the counter will recount from zero.

## F 6 3 2 1 0 DECIMAL SELECTOR:

Presets the number of decimal places in the answer. In the "F" position, the answer is displayed in the floating decimal system.

## K+A CONSTANT/ADD MODE SELECTOR:

"K": The following constant functions will be performed:

- Multiplication:  
The calculator will automatically remember the first number entered (the multiplicand) and **[x]** instruction.  
Division:  
The calculator will automatically remember the second number entered (the divisor) and **[ ÷ ]** instruction.  
"A": Neutral  
"A": Use of the Add mode permits addition and subtraction of numbers without an entry of the decimal point. When the Add mode is activated, the decimal point is automatically positioned according to the decimal selector setting.  
Use of **[ + ]**, **[x]** and **[ ÷ ]** will automatically override the Add mode and decimal correctly answers will be printed at the preset decimal position.

## ↑ 5/4 ↓ ROUNDING SELECTOR:

\*↑: An answer is rounded up.  
\*↓: An answer is rounded off.  
\*↑: An answer is rounded down.

Note: The decimal point floats during successive calculation by the use of **[x]** or **[ ÷ ]**. Si el selector decimal se coloca en "F", la respuesta siempre se redondea por defecto (↓).

If the decimal selector is set to "F" then the answer is always rounded down (↓).

## RATE GT • SET GRAND TOTAL/RATE SETTING MODE SELECTOR:

- "GT": Grand Total  
"Neutral":  
"Rate": To set up date, time, conversion rate, and tax/discount rate, place the switch at the "RATE SET" position.  
Date:  
• Enter in the order of month, day and year, then press **[OK]** to complete the entry.  
• Use **[ - ]** to separate month, day, and year.  
• When **[OK]** is pressed, the number entered is evaluated and displayed as "date" if the value is within the following range; "Error" is displayed otherwise, and the previously set date is restored.  
Month: 1 - 12; day: 1 - 31; Year: 2000 - 2099 (in 4 digits) or 00 - 99 (in 2 digits)

Time:  
• Enter in the order of hour, minutes, then press **[OK]** to complete the entry.  
(There is no entry available for the seconds value. The clock starts at zero second.)

- If the hour/minute digit is less than 10, it is not necessary to enter the first digit "0".
- Use **[ - ]** to separate hour and minute values.
- When **[OK]** is pressed, the number entered is evaluated and displayed as "time" if the value is within the following range; "Error" is displayed otherwise, and the previously set time is restored.  
Hour: 0 - 23 (24-hour system for the hour entry); Minute: 0 - 59

Conversion rate:  
• Press **[ \* ]** twice, enter the conversion rate, followed by **[OK]**.

- A maximum of 6 digits can be stored (decimal point is not counted as a digit).

Tax / discount rate:  
• Press **[ \* ]** twice, enter the tax rate, followed by **[OK]**.

- A maximum of 6 digits can be stored (decimal point is not counted as a digit).

Note: 2. Be sure to set this selector to the "\*" position after storing an each rate.  
• For the conversion rate and the tax / discount rate, a single value can be stored for each. If you enter a new rate, the previous rate will be cleared.

CLOCK / CALENDAR KEY:  
• Each time this key is pressed, the mode switches.  
Calculation mode → Date display mode → Clock display mode → Calculation mode

• Use this key also to adjust date and time (see "GRAND TOTAL / RATE SETTING MODE SELECTOR").

TIME CLOCK KEY:  
• Utilise this key to enter hours and minutes in time calculations.

- Press this key after entering an hour or minute value. (There is no need to press this key when entering a second value.)

• To bypass hour entry, press this key after entering 0.

• To bypass minute entry, you may press this key alone, or press it after entering 0.

• When this key is pressed, if the preceding entry is in any of the following ranges, it is set as an hour or minute value:

Hour: Within 6 digits

Minute: 0 to 99 (An entry above 60 is rounded up to one hour. If a value of more than 3 digits is entered, only the least significant two digits take effect.)

• A second value is set when it is entered in the following range: Second: 0 to 99 (An entry above 60 is rounded up to one minute. If a value of more than 3 digits is entered, only the least significant two digits take effect.)

• A second value is set when it is entered in the following range: Second: 0 to 99 (An entry above 60 is rounded up to one minute. If a value of more than 3 digits is entered, only the least significant two digits take effect.)

TECLA DEL RELOJ / CALENDARIO:  
• Cada vez que pulse esta tecla, el modo cambiará.

Modo de cálculo → Modo de visualización de la fecha → Modo de visualización del reloj → Modo de cálculo

• Utilice esta tecla para ajustar la fecha y la hora (consulte "SELECTOR DEL MODO DE GRAN TOTAL / FIJACIÓN DE TASA").

TIME CLOCK DE CÁLCULO DE TIEMPO:  
• Utilice esta tecla para introducir horas y minutos en cálculos de tiempo.

• Pulse esta tecla para introducir una valor de horas o minutos (no es necesario pulsar esta tecla cuando se introduce un valor de segundos).

• Para pasar por alto la entrada de horas, pulse esta tecla tras introducir 0.

• Para pasar por alto la entrada de minutos, podrá pulsar esta tecla sola o tras introducir 0.

• Cuando se pulse esta tecla, si la entrada precedente se encuentra dentro de cualquiera de los rangos siguientes, ésta se establecerá como un valor de horas o minutos:

Horas: dentro de 6 dígitos

Minutos: 0 a 99 una entrada superior a 60 se redondeará a 0. Si se introduce un valor de más de 3 dígitos, solo tendrán efecto los dos dígitos menos significativos.

• Se establecerá un segundo valor cuando éste se introduzca dentro del rango siguiente:

Segundo: 0 a 99 (una entrada superior a 60 se redondeará a 0 minuto. Si se introduce un valor de más de 3 dígitos, solo tendrán efecto los dos dígitos menos significativos).

• Para pasar por alto la entrada de minutos, pulse esta tecla tras introducir 0.

• Para pasar por alto la entrada de horas, pulse esta tecla tras introducir 0.

• Cuando se pulse esta tecla, si la entrada precedente se encuentra dentro de cualquiera de los rangos siguientes, ésta se establecerá como un valor de horas o minutos:

Horas: dentro de 6 dígitos

Minutos: 0 a 99 una entrada superior a 60 se redondeará a 0 minuto. Si se introduce un valor de más de 3 dígitos, solo tendrán efecto los dos dígitos menos significativos.

• Se establecerá un segundo valor cuando éste se introduzca dentro del rango siguiente:

Segundo: 0 a 99 (una entrada superior a 60 se redondeará a 0 minuto. Si se introduce un valor de más de 3 dígitos, solo tendrán efecto los dos dígitos menos significativos).

PAPER FEED KEY  
- LAST DIGIT CORRECTION KEY

GT GRAND TOTAL KEY  
CE CLEAR ENTRY KEY

\* TOTAL KEY:  
Press this key twice, followed by **[TX]**, to print the set tax rate. The tax rate is printed with the symbol "TX".

× MULTIPLICATION KEY  
÷ DIVISION KEY

- MINUS EQUAL KEY  
+ PLUS EQUAL KEY

± CHANGE SIGN KEY

MU MARKUP KEY

\*M MEMORY TOTAL CLEAR KEY

\*M MEMORY SUBTOTAL RECALL KEY

M+ MEMORY PLUS KEY  
M- MEMORY MINUS KEY

TAX+ TAX- INCLUDING KEY

PRE-TAX KEY

% PERCENT KEY

NON-ADD/SUBTOTAL KEY:  
Non-add - When this key is pressed right after an entry of a number in the Print mode, the entry is printed on the left-hand side with the symbol "#".

This key is used to print out numbers not subjects to calculation such as code, date, etc.

Subtotal - Used to get subtotal(s) of additions and/or subtractions. When pressed following the **[+]** or **[ - ]** key, this key is used with the symbol "#".

And calculation may be continued.

By pressing this key even in the Non-print mode, the displayed number is printed with the symbol "#".

• When the POWER SWITCH; PRINT / ITEM COUNT MODE SELECTOR is set "P+PIC" or "P+IC" position, and Date or Clock is displayed, press this key to print the displayed contents, including "#" symbol, from the left side of the paper roll.

Example:  
Date printing  
#9 · 15 · 2010 ·····

(when the date is September 15, 2010)

Clock printing  
#10 · 30 ····· A  
(when the time is 10:30 a.m.)

#6 · 25 ····· P  
(when the time is 6:25 p.m.)

• When the Date / Clock printing is complete, the Calculation mode is restored.

Notas: • Cada vez que se use la tecla **[ - ]** en la resta, se restará 1 de la cuenta.

• La cuenta queda impresa cuando se obtiene el resultado calculado.

• Al apretar la tecla **[x]**, **[x]**, **[ - ]**, **[AVG]** o **[MU]** se borra la memoria.

2. Pulse el interruptor RESET situado en la parte posterior de la unidad. (Consulte "REPOSICIÓN DE LA UNIDAD".)  
\* El reloj se pondrá en funcionamiento, indicando la fecha y la hora actuales con 1 de enero, 2005, 12:00 a.m.

Ajuste de la fecha y la hora  
Ejemplo: Cuando la fecha sea el 15 de septiembre de 2010, y la hora las 3:38 p.m.

(see "GRAND TOTAL / RATESETTING MODE SELECTOR" (consulte "SELECTOR DEL MODO DE GRAN TOTAL / FIJACIÓN DE TASA")

\* When the adjustment is complete, the clock starts at 3:38:00 p.m.

\* Cuando finalice el ajuste, el reloj comenzará a funcionar a las 3:38 p.m.

TECLA DE AVANCE DEL PAPEL  
- TECLA DE CORRECCIÓN DE LA ULTIMA CIFRA  
GT TECLA DE GRAN TOTAL  
CE TECLA DE BORRADO DE ENTRADA

\* TECLA DE TOTAL:  
Presione esta tecla dos veces, seguida por **[TX]**, para imprimir la tasa de impuestos establecida.

La tasa de impuesto se imprime con el símbolo "TX".

× TECLA DE MULTIPLICACIÓN  
÷ TECLA DE DIVISIÓN</p

