



### STEP 1: Installing the Mounting Brackets

- 1a. Mark the center of the gable.

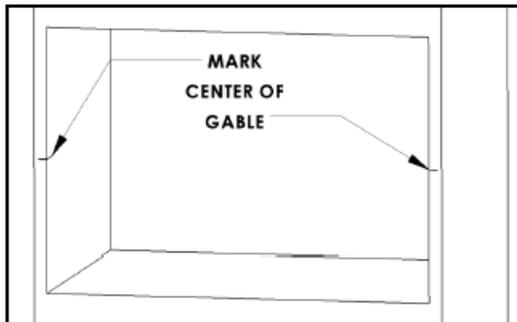


- 1b. Align the **Mounting Brackets** with the mark keeping it flush against the gable.

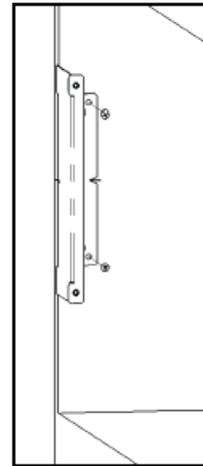


- 1c. Secure each mount to the gables using **two** of the provided #6 wood screws.

### STEP 2: Installing the Runners

- 2a. Insert the **Alignment Tabs** into the **Runners** as shown below.

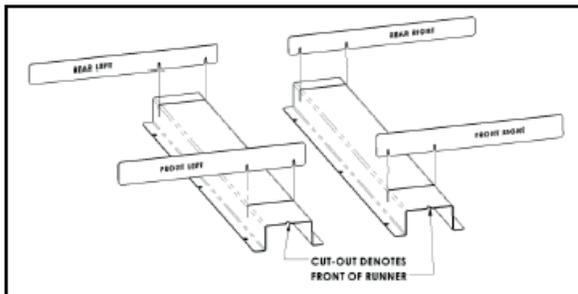

- 2b. Place **Runners** on shelf and slide them so that the **tabs** stop against the gables.

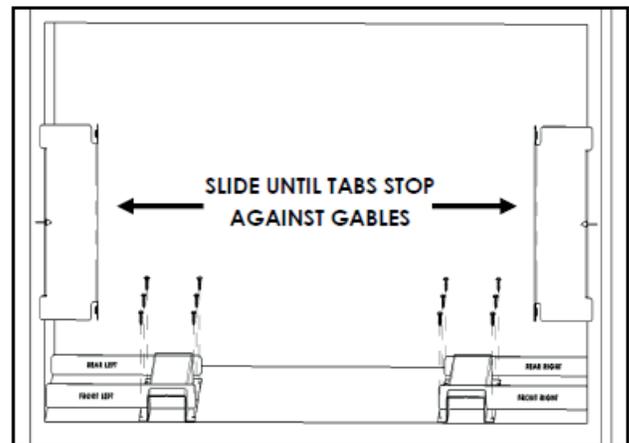


- 2c. Secure the **Runners** down with the provided #6 wood screws.

### STEP 3: Installing the Microwave


- 3a. Place the **Microwave** on the **Runners**.
- 3b. Lift and slide the microwave so that the front feet sit behind the lip of the front **Alignment Tabs**.

This step ensures you have clearance to install the **Frame** mounting screws.

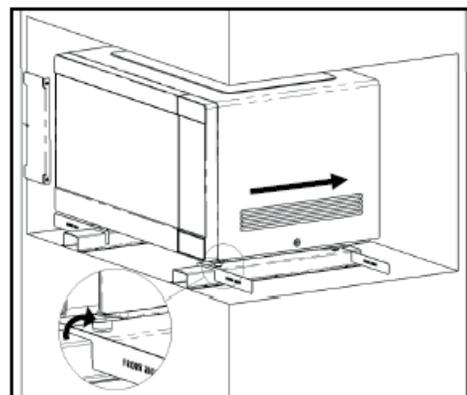



### STEP 4: Installing the Frame

- 4a. Peel the protective film off of the **Frame**.
- 4b. Place the **Frame** onto the cabinet face and secure onto the **Mounting Brackets** using the provided **8-32 screws**.

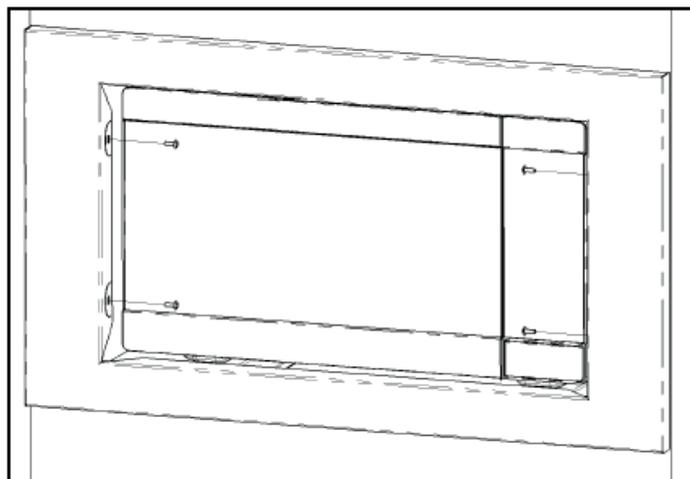



### STEP 5: Finalizing the Installation

- 5a. Open the **Microwave Door** and lift the **Microwave** up and towards you until the front legs clear the lip of the front **Alignment Tabs**.
- 5b. Push the **Microwave** back until the front legs make contact with the lip of the front **Alignment Tabs**. The **Microwave** face will now be flush with the **Frame**.
- 5c. Adjust the **Microwave** horizontally as needed to center it in the **Frame** opening.
- 5d. Your installation is complete - Stand back and admire a job well done.

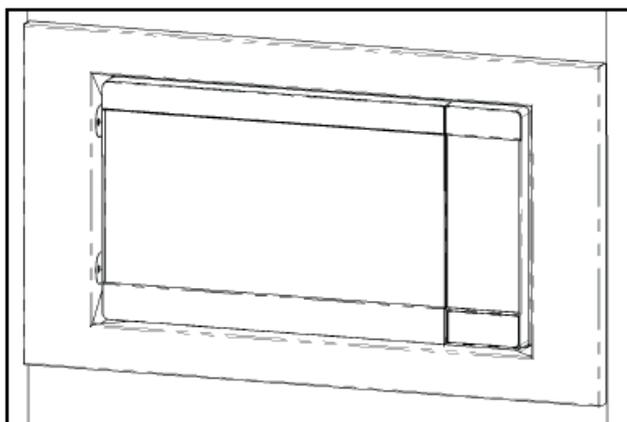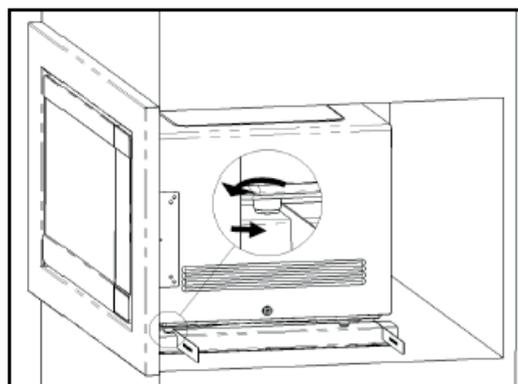

### ÉTAPE 1 : Installation des supports de fixation



- 1a. Marquez le centre du pignon.

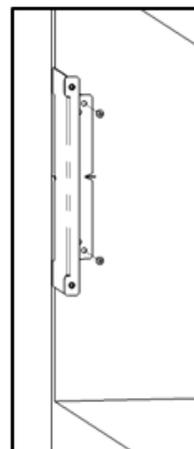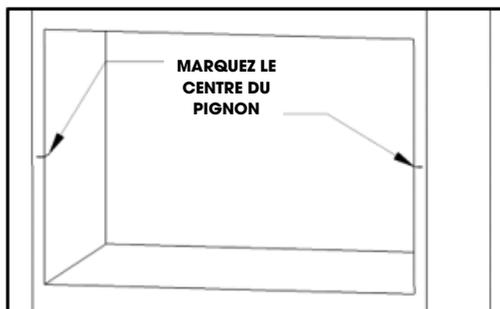

- 1b. Alignez les **supports de fixation** avec la marque en les maintenant contre le pignon.
- 1c. Fixez chaque support aux pignons à l'aide des **deux vis à bois n° 6** fournies.

### ÉTAPE 2 : Installation des coulisses

- 2a. Insérez les **languettes d'alignement** dans les **coulisses** comme il est indiqué ci-dessous.

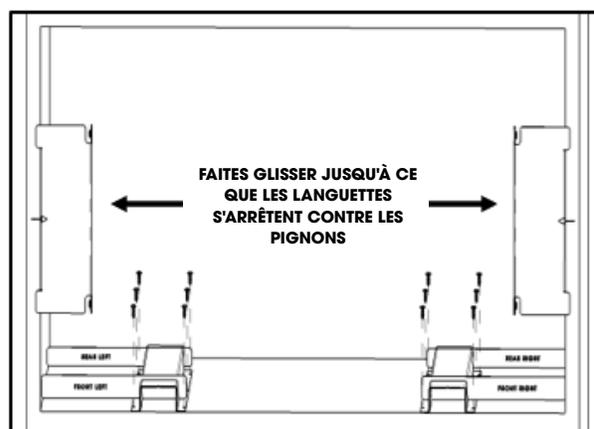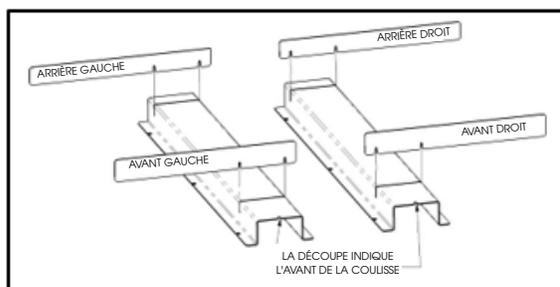


- 2b. Placez les **coulisses** sur l'étagère et faites-les glisser de façon à ce que les **languettes** s'arrêtent contre les pignons.
- 2c. Fixez les **coulisses** à l'aide des **vis à bois n° 6** fournies.

### ÉTAPE 3 : Installation du micro-ondes


- 3a. Placez le **micro-ondes** sur les **coulisses**.
- 3b. Soulevez et faites glisser le micro-ondes de manière à ce que les pattes avant se trouvent derrière le rebord des **languettes d'alignement** avant.

Cette étape permet de garantir qu'il y a suffisamment d'espace pour installer les vis de montage du **cadre**.

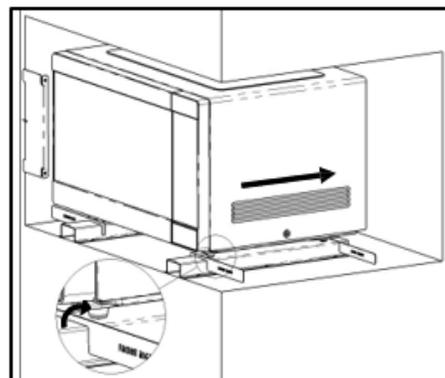

### ÉTAPE 4 : Installation du cadre

- 4a. Retirez la pellicule protectrice du **cadre**.
- 4b. Placez le **cadre** sur la face de l'armoire et fixez-le sur les **supports de montage** à l'aide des vis **8-32** fournies.

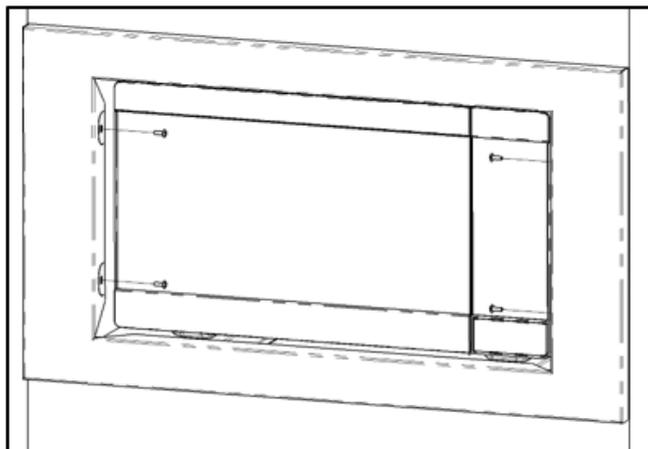

### ÉTAPE 5 : Achèvement de l'installation

- 5a. Ouvrez la **porte du micro-ondes** et soulevez le **micro-ondes** vers le haut et vers vous jusqu'à ce que les pattes avant dégagent le rebord des **languettes d'alignement** avant.
- 5b. Poussez le **micro-ondes** vers l'arrière jusqu'à ce que les pattes avant entrent en contact avec le rebord des **languettes d'alignement** avant. La face du four à **micro-ondes** est au ras du **cadre**.
- 5c. Ajustez le **micro-ondes** horizontalement au besoin pour le centrer dans l'ouverture du **cadre**.
- 5d. Votre installation est terminée. Reculez et admirez le bon travail accompli.

